iHome

AIR SERIES

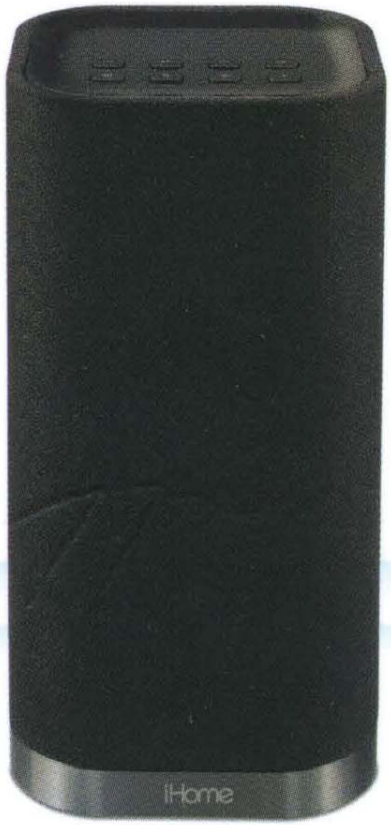

SCAN
LEARN MORE

iW3 Start Guide

Visit our website for additional help and how-to videos
www.ihomeaudio.com/support/airplay/

AirPlay

Overview

Controls and Indicators

TOP PANEL

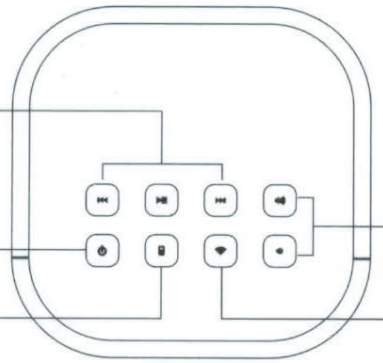

iPod and iTunes music controls

Power

Local iPod audio mode
(play audio via USB sync cable or aux-in)

Volume Up/Down

AirPlay wireless audio mode
(audio via iOS device or iTunes)

BOTTOM

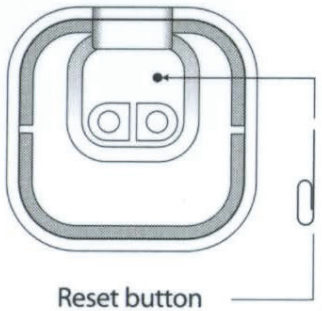

Reset button

Reset the iW3 speaker by using a paper clip to press the reset button

REAR PANEL

FRONT PANEL

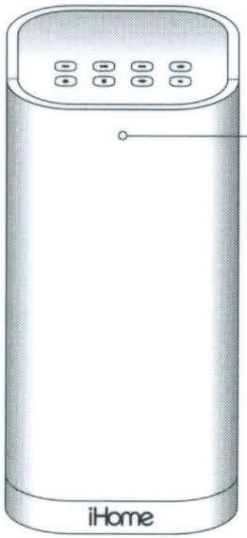

Status LED

- OFF, when in Standby or Power OFF mode and battery is fully charged
- Green, solid when unit is ON
- Green, blinking when volume is muted
- Red, solid when battery is charging
- Red, blinking when battery needs charging

REAR PANEL

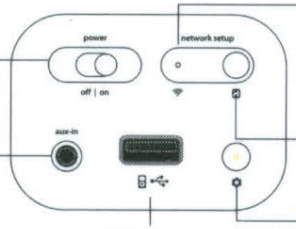

Master power switch

Aux-in

USB Port
(Charge, play and firmware updates)

Wi-Fi network status LED

- Master power is OFF
- Green, solid when connected to a Wi-Fi network
- Green, flashing when in Network Setup mode
- Red, blinking when NOT connected to a Wi-Fi network

Wi-Fi network setup button
(Wi-Fi Sharing via iOS & manual network setup)

Firmware button & status LED

Step 1 - Getting Started

What's in the Box

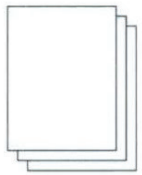

iW3 start guide

charging base

power adaptor

USB sync cable

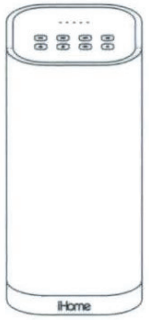

iW3 Speaker

Powering on the iW3

1 Connect charging base to power source

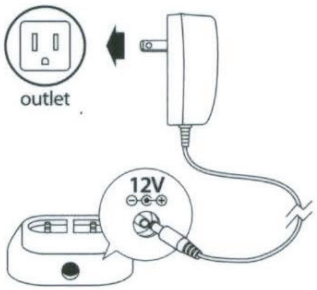

2 Place iW3 on charging base

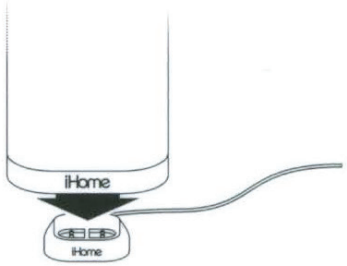

3 Turn master power switch ON

allow 20 seconds for the IW3 system to startup

Check list before proceeding to Step 2

- ☑ To enjoy AirPlay wireless audio, you must have the following:
  - iTunes or an iOS device (iPod touch, iPhone, or iPad).
  - A functioning home network with Wi-Fi.
- ☑ Download the latest software updates for iTunes and your iOS device to ensure that you are able to enjoy the latest AirPlay enhancements and compatibility.
- ☑ Download the iHome Set app for iPod touch, iPhone and iPad.
- ☑ Have your Wi-Fi network name (SSID) and password (if applicable) available for reference.
- ☑ If you use security for your network, use WPA/WPA2 security (not WEP or WPA/WPA2 enterprise)

Note: AirPlay requires iTunes 10.1 (Mac and PC) or later; OR an iPad (1st, 2nd, and 3rd generations) iPhone (4S, 4, and 3GS), iPod touch (4th, 3rd, and 2nd generations) with iOS 4.2 or later. The iHome Set app requires iOS 4.2 or later.

Step 2 - Network Setup for AirPlay

Option A - Connecting via Wi-Fi Sharing with iOS 5.0 (RECOMMENDED)

If you have an iPod touch, iPhone, or iPad with iOS 5.0 or later, we recommend that you use Wi-Fi network log-in sharing for the quickest network setup experience.

1. Verify that the iW3 is powered on.

2. Activate Wi-Fi on your iPad, iPhone, or iPod touch (with iOS 5.0 or later) and connect to your preferred network.

3. Connect your iOS device to the iW3 using the included USB sync cable.

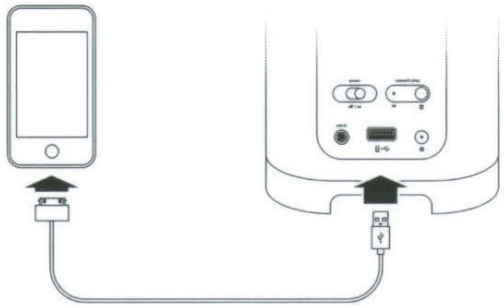

4. Press the Network Setup button on the back of the iW3.

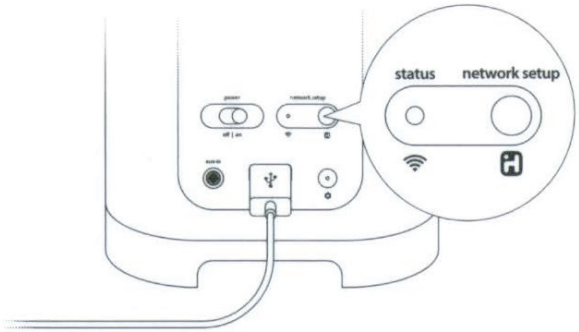

5. A pop-up message will appear on the iOS device asking if you want to share your Wi-Fi settings. Select 'Allow'.

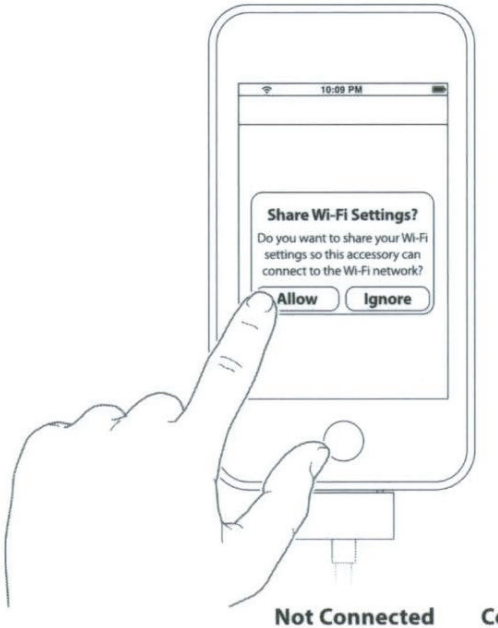
10:09 PM
Share Wi-Fi Settings?
Do you want to share your Wi-Fi settings so this accessory can connect to the Wi-Fi network?
Allow
Ignore

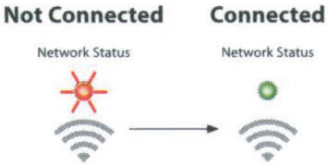

Success!

Your iOS device will share current wireless network credentials with the iW3 and a confirmation tone will sound. Verify that the Network Status LED is green and then keep reading to learn how to use iW3 to stream your iTunes and iOS audio content using AirPlay.

Option B - Manually connecting with the iHome Set app

If you have an iPod touch, iPhone, or iPad with iOS 4.2 or later, we recommend that you use our free iHome Set app to easily rename your iW3 speaker and configure network settings.

1. Verify that the iW3 is powered on.

2. Connect your iOS device to the iW3 using the included USB sync cable.

3. Download our free iHome Set app from the App Store and launch.

4. Scroll down the app interface and select the 'Network' tab interface and then select 'Manual Setup' button.

5. Select your preferred Wi-Fi network from the list of available networks and enter password if prompted.

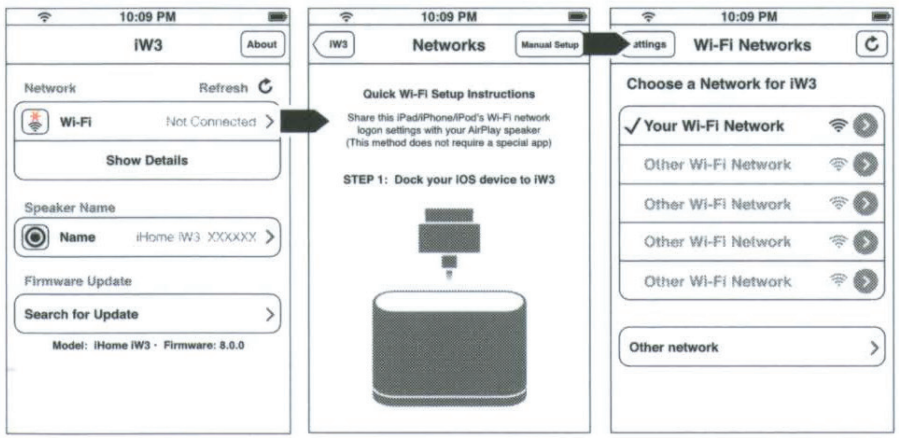

OPTIONAL: To rename your iW3 speaker, exit manual network setup, select 'Speaker Name' and customize how your iW3 speaker will present itself on your network. Press 'DONE' to confirm the new name.

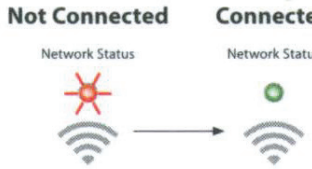

Success!

Verify that the Network Status LED is green and then keep reading to learn how to use iW3 to stream your iTunes and iOS audio content using AirPlay.

Option C - Connecting with your Mac or PC over Wi-Fi

1. Verify that the iW3 is powered on.

2. Press and hold (3 sec.) **Network Setup** button on the back of unit.

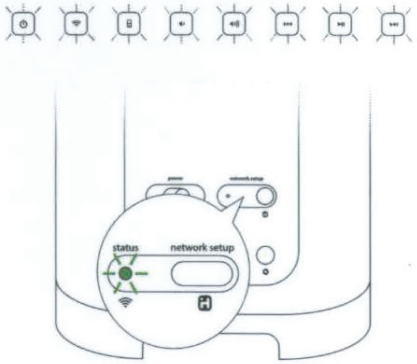

3. Select the network called **"iHome Setup ######"** from Wi-Fi network settings on your Mac or PC.

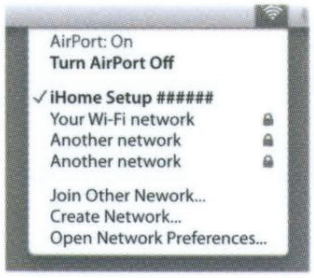

upper right corner of Mac screen

lower right corner of PC Screen

30s

30s

4. Launch a web browser (ex. Safari, Chrome, or Firefox) and enter **http://192.168.1.12** in the address bar.

5. Select the 'Networking Tab', click 'Configure Network Settings', choose preferred Wi-Fi network from the list of available and click 'Apply'.

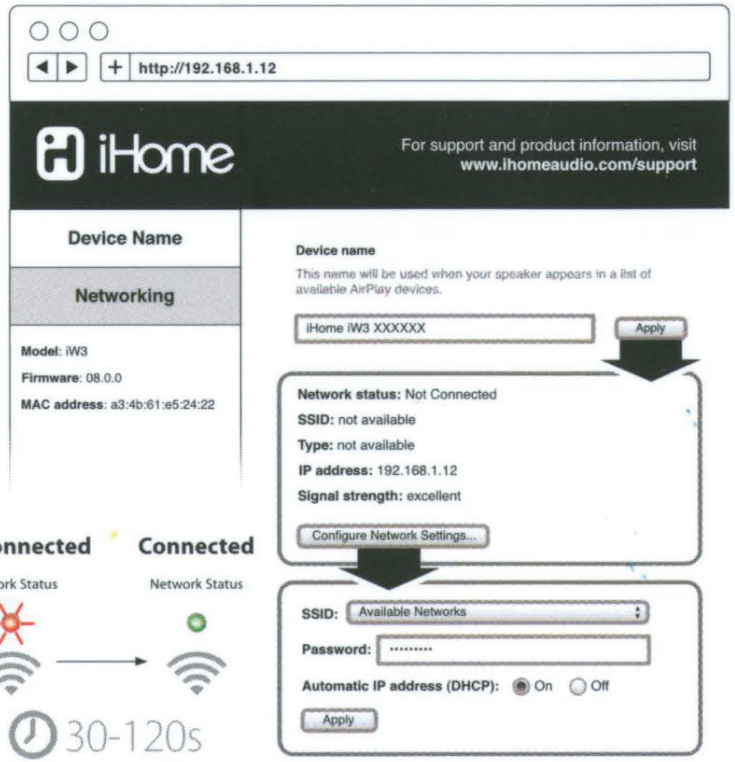

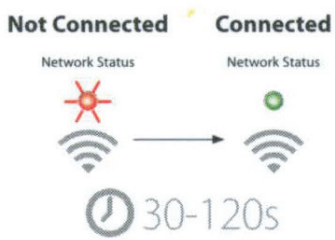

- Select the 'Device Name' tab to customize the name of your iW3 speaker.
- If the page is not initially available, reload the page.
- If the Status LED continues to flash green for more than 2 minutes, reset the iW3 speaker and repeat the Wi-Fi Network Setup process.

Visit our website for additional help: www.ihomeaudio.com/support/airplay/

Step 3 - Play

AirPlay & iPod touch, iPhone, or iPad

Using an iOS device:

1. Connect your iOS device to the same Wi-Fi network as iW3. Go to Settings --> Wi-Fi on your iOS device.
2. Tap on iPod/Music app, look for the AirPlay icon next to the iPod music transport controls.
3. Tap on the AirPlay icon and choose iW3 from the list of speakers. If the iW3 speaker is not available, restart your iOS device and verify that the iW3 is powered on.
4. Press play.

AirPlay & iTunes

Using a Mac or PC with iTunes (AirPlay streaming is designed for iTunes media and audio content only):

1. Connect your Mac or PC to the same Wi-Fi network as iW3.
2. Open iTunes on your computer.
3. Within iTunes open "Preferences", Select the "Devices" tab, and ☑ activate the following option: "Allow iTunes control from remote speakers"
4. Click OK, close iTunes preferences.
5. Look for the AirPlay icon in the bottom right corner of the iTunes window.
6. Click the AirPlay icon and choose iW3 from the list of speakers. Click "Multiple Speakers..." to select additional AirPlay speakers. If the iW3 speaker is not available, restart iTunes and verify that the iW3 is powered on.
7. Press play.

Step 4 - Control

AirPlay Wireless Audio Mode

Enjoy AirPlay audio anywhere:
1. Press ⏻ to exit standby mode and power the iW3 ON.
2. Press ᯤ for AirPlay wireless audio mode.
3. Use ⏮ ⏯ ⏭ buttons on the iW3 to control streaming AirPlay content.

Local iPod Audio Mode

(iPhone & sync charge stand not included)

Charge and Play iPad, iPhone and iPod using iPod USB sync cable:
1. Connect USB sync cable to iW3's USB port.
2. Press Local audio mode button and enjoy iPod and iPhone charging and audio playback.
3. Using ⏮ ⏯ ⏭ buttons on the iW3 in iPod mode will control your iPod music.

Note: Use Local Audio mode to play music via USB and Aux-in.

Multi-room audio

Add AirPlay-enabled speakers to any room
iHome's AirPlay solutions provide an affordable way to enjoy a truly wireless home audio experience anywhere you want - including kitchen, bedroom, livingroom or patio.

Apps

Remote App - Control iTunes playback anywhere in the house
Download Apple's Remote app free from the App Store to your iOS device and control your iTunes library and AirPlay speakers wirelessly when connected to the same Wi-Fi network.

PANDORA®, iHeartRadio®, and TuneIn® - Internet radio music apps
Turn your iW3 system into an internet radio when you use AirPlay audio streaming with your favorite iOS music apps.

iHome+apps - iW3 works with a suite of iHome apps available on the app store
iHome Set - control iW3 features like network setup, EQ, and firmware updates.
iHome Sleep - wake to custom alarms and music playlists.

Troubleshooting

Problem	Possible Solutions
I am unable to connect the iW3 to my home Wi-Fi network.	1. Verify that your Wi-Fi network is functioning and Wi-Fi certified. 2. The iW3 does not support WEP or WPA/WPA2 Enterprise security types. We recommend Open, WPA/WPA2 Personal. Once you change the security type on your router, we suggest rebooting your Wi-Fi router and your iW3 speaker. 3. Make sure your router firmware is up to date. 4. Make sure that your wireless network is not on a conflicting channel with one of your neighbors. You can use software like iStumbler on Mac or Netstumbler on Windows to verify that adjacent networks, sorted by SNR, aren't on the same channel. Channels 1, 6, and 11 are the three non-overlapping 802.11g channels. 5. Move the iW3 closer to your network access point; the Wi-Fi signal is weak or there are overlapping Wi-Fi signals or the iW3 is out of range of your Wi-Fi network. 6. Keep away from potential sources of interference which may affect Wi-Fi signal, such as microwave ovens. 7. Reset the iW3 Hardware and repeat network setup: - Using a paper clip, press the iW3 speaker by pressing the Reset Button on the bottom of the speaker within the charging base recess. The iW3 will reboot and power ON again. - Repeat iW3 Wi-Fi Network Setup process if necessary.
I've selected the iW3 speaker as my AirPlay audio source, but I do not hear any music.	1. Verify that the volume is not muted or set to 0. 2. Verify that there is not another iTunes library or iOS device connected to the iW3 speaker. 3. Try restarting iTunes or your iOS device. 4. Reset the iW3 using the Reset button and reboot your Wi-Fi router.
The iW3 doesn't respond or doesn't turn ON.	1. Verify that the adaptor is connected, that the power outlet is live (not controlled by a wall switch), and battery is fully charged. 2. Reset the iW3 speaker using a paper clip to press the Reset Button located on the bottom cabinet.

Troubleshooting

Problem	Possible Solutions
I've successfully connected the iW3 to my home network, but I cannot select the iW3 speaker from iTunes or my iOS Device.	The iW3 speaker must be on the same network as your AirPlay source. iTunes Solutions: 1. Make sure that you have the latest version if iTunes. 2. Try restarting iTunes. 3. Before you open iTunes, make sure that you have enabled Bonjour service in your PC. Take Windows XP for example: to enable the service, you can click Start->Settings-> Control Panel, and double click Administrative Tools-> Services->Bonjour Service, then click Start followed by OK on the pop-up menu. 4. In order for the iW3 to be able to access track controls in iTunes you need to allow it in iTunes: - In iTunes, go to Preferences. - In the Devices tab, check "Allow iTunes audio control from remote speaker" iOS device solutions: 1. Make sure the iOS device has the latest software. 2. If your unable to see the Airplay icon on the iOS device, restart your iOS device. 3. Verify that your device is connected to the correct Wi-Fi network. Note: The original iPhone, iPhone 3G, and iPod touch (1st generation) do not support AirPlay.

Visit our website for additional help: www.ihomeaudio.com/support/airplay/

© 2012 SDI Technologies Inc. All rights reserved.
iHome and the logo are registered trademarks of SDI Technologies.
AirPlay, iPad, iPhone, iPod touch, iPod, are registered trademarks of Apple Inc.
TuneIn® is a registered trademark of TuneIn, Inc.
PANDORA® is a registered trademark of Pandora Media Inc.
iHeartRadio® is a registered trademark of Clear Channel Communications, Inc.
Printed in China.

iW3 04242012-A

Read this first!

To ensure your AirPlay device and your iHome work together, follow these 3 tips to avoid common problems:

Wi-Fi Network

General Issues

1. Verify that your router's firmware is up-to-date.
2. Older model Wi-Fi routers are not fully optimized to stream AirPlay content. Consider upgrading to a new Wi-Fi router to ensure the latest perfomance in Wi-Fi technology and best AirPlay streaming experience.
3. Verify that your secured network is using WPA or WPA2 personal encryption. WEP and Enterprise encryption is not supported by AirPlay technology.

AirPlay & iOS for iPod touch, iPhone, or iPad

General Issues

1. Verify that the firmware of your iPod touch, iPhone or iPad is up-to-date.
2. Restart your iOS device after you connect the iHome AirPlay speaker to your network.

AirPlay & iTunes

General Issues

1. Verify that iTunes is up-to-date and running the latest version.
2. Restart iTunes after you connect the iHome AirPlay speaker to your network.
3. Verify that you have activated "Allow iTunes control of remote speakers" from iTunes: Preferences>Devices

Still have Problems?

Visit our website: www.ihomeaudio.com/support/airplay
or email us at: airplay@ihomeaudio.com

iW3-04032012

A lire en premier !

Pour que votre appareil AirPlay et iHome fonctionnent ensemble, suivez ces 3 conseils pour éviter les problèmes ordinaires :

Réseau Wi-Fi

Problèmes d'ordre général

1. Vérifiez que le micrologiciel de votre routeur est à jour.
2. Les anciens modèles des routeurs Wi-Fi ne sont pas entièrement optimisés pour diffuser des contenus AirPlay. Il convient d'acquérir un nouveau routeur Wi-Fi pour bénéficier des dernières performances de la technologie Wi-Fi et avoir une meilleure diffusion AirPlay.
3. Vérifiez que votre réseau sécurisé utilise le cryptage WPA ou WPA2. Le cryptage WEP et Enterprise n'est pas supporté par la technologie AirPlay.

AirPlay et iOS pour iPod touch, iPhone et iPad

Problèmes d'ordre général

1. Vérifiez que le micrologiciel de votre iPod touch, iPhone ou iPad est à jour.
2. Redémarrez votre dispositif iOS après la connexion de vos enceintes iHome AirPlay à votre réseau.

AirPlay et iTunes

Problèmes d'ordre général

1. Vérifiez qu'iTunes est à jour et exécute la dernière version.
2. Redémarrez iTunes après la connexion de vos enceintes iHome AirPlay à votre réseau.
3. Vérifiez que vous avez activé « Autoriser iTunes à contrôler les enceintes distantes » dans iTunes : Préférences > Périphériques

Encore des problèmes ?

Visitez notre site web : www.ihomeaudio.com/support/airplay
ou par e-mail à : airplay@ihomeaudio.com

iP76

iHome®

www.ihomeaudio.com

Experience True Wireless Audio

Introducing the iW1 AirPlay®
wireless audio system with rechargeable battery

AirPlay

For more details, visit www.ihomeaudio.com/discover/airplay/

iP16

Made for iPod iPhone

iP16G

Portable stereo speakers with
alarm clock for iPhone®/iPod®.
Charge, wake & sleep to iPhone/iPod.

UNIVERSAL VOLTAGE ADAPTOR 100-240V

iP4

Made for iPod iPhone

iP4P

iP4G

works with

FREE alarm clock app
+
internet radio app

Portable stereo boombox for iPhone/iPod

UNIVERSAL VOLTAGE ADAPTOR 100-240V

iA63

Made for iPod iPhone

works with

FREE alarm clock app + internet radio app

App-enhanced alarm clock FM radio stereo speaker system with **motorized rotating dock** for iPhone/iPod

UNIVERSAL VOLTAGE ADAPTOR 100-240V

iA17

Made for iPod iPhone

works with

FREE alarm clock app + internet radio app

Both cabinet and LCD change color!

App-enhanced color changing stereo FM alarm clock radio for iPhone and iPod

iD91

Made for iPod iPhone iPad

works with

FREE alarm clock app + internet radio app

Sync unit with iPhone time

App-enhanced dual alarm stereo clock radio for your iPhone/iPod/iPad with FM presets

UNIVERSAL VOLTAGE ADAPTOR 100-240V

iHM79

RECHARGEABLE BATTERY

Magnetic speakers attach in capsule shape

Portable multimedia speakers for your iPad, iPod, iPhone, laptop, and MP3 player. Includes built-in **rechargeable batteries** and protective case.

S2N602/1/27/12

iDM8

Bluetooth® RECHARGEABLE BATTERY

Portable **rechargeable Bluetooth®** speaker

iDM12

Bluetooth® RECHARGEABLE BATTERY

Portable **rechargeable Bluetooth** stereo speakers for iPad/iPhone/iPod or any Bluetooth-enabled device

iDM15

Bluetooth®

RECHARGEABLE BATTERY

iDM15S

Portable **rechargeable Bluetooth** speakers with **speakerphone** for any Bluetooth-enabled device

iD9

RECHARGEABLE BATTERY

Made for iPod iPhone iPad

works with

FREE alarm clock app + internet radio app

iD9S

Portable app-friendly **rechargeable** speaker system for iPad/iPhone/iPod

UNIVERSAL VOLTAGE ADAPTOR 100-240V

iP76

iHome®

www.ihomeaudio.com

iW3 - Consumer Product Safety Guide

FCC Statement

FCC ID: EMOIW3 IC: 986B-IW3

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifying or tampering with your system's internal components can cause a malfunction and might invalidate the system's warranty and void your FCC authorization to operate it.

The separation distance between the equipment and the user shall not be less than 20 cm.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
Operation is subject to the following two conditions:

1. This device may not cause interference and
2. This device must accept any interference received, including interference that may cause undesired operation

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Important Safety Instructions

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
    - **A.** the power supply cable or plug has been damaged.
    - **B.** objects have fallen into or liquid has been spilled into the enclosure.
    - **C.** the unit has been exposed to rain.
    - **D.** the unit has been dropped or the enclosure damaged.
    - **E.** the unit exhibits a marked change in performance or does not operate normally.
12. **Antenna** – Do not connect an external antenna to the unit (other than that provided).
13. **Periods of None Use** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
14. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can damage the surface of the unit.

iW3 - Guide du consommateur concernant la sécurité des produits

FCC ID: EMOIW3 IC: 986B-IW3

Canada Statement /Canada Déclaration

This device complies with Industry Canada RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le present appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio RSS-210. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioé lectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

Toute modification ou altération des composants internes de votre système peut entraîner un dysfonctionnement et peut annuler la garantie du système et l'autorisation de la FCC pour le faire fonctionner.

La distance séparant l'utilisateur de l'équipement doit être supérieure ou égale à 20 cm.

Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada

IMPORTANTES CONSIGNES DE SÉCURITÉ

1. **L'eau et l'humidité** – L'appareil ne doit pas être utilisé à proximité de l'eau. Par exemple : près d'une baignoire, d'un lavabo, d'un évier de cuisine, d'une cuve à lessive, d'une piscine ou dans un sous-sol mouillé.
2. **Ventilation** – L'appareil doit être situé de sorte que son emplacement ou sa position ne gêne pas sa bonne ventilation. Par exemple, il ne doit pas être situé sur un lit, un sofa, un tapis ou une surface similaire pouvant bloquer ses évents. Il ne faut pas non plus le placer dans un endroit engoncé, tel une bibliothèque ou une armoire, ce qui pourrait bloquer le débit d'air à travers les évents.
3. **Chaleur** – Placez l'appareil à l'écart de sources de chaleur comme un radiateur, une chaudière, un poêle ou d'autres appareils (y compris un amplificateur) qui produisent de la chaleur.
4. **Sources d'alimentation électriques** – L'appareil doit être connecté à un bloc d'alimentation uniquement du type décrit dans le mode d'emploi ou indiqué sur l'appareil.
5. **Protection du cordon d'alimentation** – Acheminez le cordon d'alimentation de sorte que personne ne puisse marcher dessus ou qu'il ne puisse être coincé par des éléments placés sur lui ou contre lui. Il vaut toujours mieux dégager l'endroit d'où émerge le câble de l'appareil jusqu'à celui où il est branché dans une prise de courant.
6. **Nettoyage** – L'appareil doit être nettoyé uniquement tel que recommandé. Voyez la section Entretien de ce manuel pour plus de détails.
7. **Pénétration par des objets et des liquides** – Assurez-vous qu'aucun objet ne tombe ou qu'aucun liquide ne soit versé dans les ouvertures du produit.
8. **Accessoires** – N'utilisez pas d'accessoires non recommandés par le fabricant.
9. **Protection contre la foudre et les surtensions** – Débranchez l'appareil de la prise murale et déconnectez l'antenne ou le câble durant un orage électrique ou si l'appareil est sans surveillance et inutilisé pendant des périodes prolongées. Ceci permettra d'éviter d'endommager l'appareil à cause de la foudre ou de surtensions.
10. **Surcharge** – Ne surchargez pas les prises de courant, les rallonges ou les boîtiers multiprises car cela pourrait poser des risques de décharge électrique ou d'incendie.
11. **Dommages nécessitant une réparation** – Confiez l'appareil à un technicien professionnel dans les situations suivantes :
    A. Le cordon d'alimentation ou sa fiche sont endommagés.
    B. Du liquide ou des corps étrangers ont pénétré dans le boîtier de l'appareil.
    C. L'appareil a été exposé à la pluie.
    D. L'appareil est tombé ou son boîtier est endommagé.
    E. Les performances de l'appareil ont changé de manière évidente ou l'appareil ne semble pas fonctionner normalement.
12. **Antenne** – Ne branchez pas une antenne externe à cette unité (autre que l'antenne fournie).
13. **Périodes de non-utilisation** – Si l'appareil reste inutilisé pendant une longue période, un mois ou plus par exemple, débranchez le câble d'alimentation de l'appareil pour éviter les risques de dommages ou de corrosion.
14. **Entretien** – Évitez tout entretien de l'équipement qui n'est pas explicitement décrit dans le mode d'emploi. Pour toute intervention technique non couverte par le mode d'emploi, adressez-vous à un technicien qualifié.

Maintenance

- Tenez l'appareil sur une surface plane hors des rayons direct du soleil ou de toute chaleur excessive.
- Protégez vos meubles quand vous posez l'appareil sur du bois naturel ou sur une surface laquée. Un vêtement ou un autre matériau de protection doit être placé entre l'appareil et le meuble.
- Nettoyez votre appareil uniquement avec un tissu doux et un peu de savon doux. Les agents nettoyants tels que le benzène ou autres détergents pourraient endommager la surface de l'appareil.

Garantie limitée de 1 an

iHome Products, une division de SDI Technologie Inc. (Ci après référé comme SDI Technologies), garantit ce produit contre tout défaut de main d'œuvre et de matériel, en condition normale d'utillisation, pour une période de 1 an à compter de la date d'achat.

Si ce produit ne vous satisfait pas pleinement, il est préférable de le retourner au magasin où vous l'avez acheté. Si cela ne suffit pas à résoudre le problème et qu'un service est requis pour résoudre un mauvais fonctionnement, durant cette période de garantie, SDI Technologie se réserve le droit de réparer, ou à sa discrétion, de remplacer le produit gratuitement (sauf 30 $ de frais de main d'œuvre, d'emballage, de retour par UPS/courrier, et d'assurance). Cette décision est sujette à vérification de la panne ou du problème après réception de ce produit au centre de service de l'usine mentionné ci-dessous. Le produit doit être accompagné de la preuve d'achat, incluant la date d'achat. Sans cette preuve d'achat les frais pour ce service seront de 60 $.

Avant de retourner ce produit pour le faire réparer, consultez la section Assistance au www.ihomeaudio.com/support ou appelez notre service clientèle pour vous aider à résoudre tout problème que vous rencontrez.

Si un entretien est requis :

1. Emballez le produit dans une boîte en papier ondulé robuste et bien matelassée.
2. Insérez-y une photocopie de votre ticket de caisse, relevé de carte bancaire, ou autre preuve d'achat.
3. Joignez un chèque ou un mandat à l'ordre de SDI Technologies, au montant de 30 $ (60 $ sans preuve d'achat).
4. Envoyez l'appareil, prépayé et assuré, au centre de service de l'usine mentionné ci-dessous.

Consumer Repair Department
SDI Technologies Inc.
1330 Goodyear Drive
El Paso, TX 79936-6420

Réserve de garantie
NOTE: Cette garantie est valable seulement si le produit est défectueux suite à l'usage pour lequel il est prévu. Cela ne couvre pas (i) les produits qui ont été abîmés par négligence, mauvais usage ou accident, ou qui ont été modifiés ou réparés par du personnel non qualifié; (ii) si le boîtier est abîmé ou cassé, ou si l'appareil est endommagé par une chaleur ou une humidité excessive; (iii) les dommages aux lecteurs médias, lecteurs CD ou cassettes (s'ils surviennent) ; (iv) le coût d'envoi du produit au centre de service de l'usine et son retour à l'expéditeur.

Cette garantie est valable uniquement aux États-Unis d'Amérique et ne s'étend pas aux propriétaires suivant celui qui a fait l'acquisition du produit. En aucun cas SDI Technologie ou ses filiales, entreprises, revendeurs, leurs employés, directeurs, actionnaires, membres ou agents ne peuvent être tenus responsables des dommages, accidents, pertes, que vous-même ou une tierce personne pourriez subir suite à un mauvais usage du produit. (Certain états ne reconnaissent pas les limitations de garantie ou l'exclusion des dommages résultants, donc ces restrictions ne s'appliquent peut-être pas à vous). Cette garantie vous donne des droits légaux spécifiques, et vous avez également d'autres droits qui varient d'un état à l'autre.

Votre acceptation et accord de la totalité de la réserve de garantie mentionnée ci-dessus est contractuelle lors de votre transfert de monnaie (monnaie, chèque ou carte de crédit) lors de l'achat de votre produit SDI Technologie.

Des questions? Visitez le www.ihomeaudio.com
ou pour toutes autres questions : 1-800-288-2792
©2012 SDI Technologies, Inc. Tous droits réservés.

iW3 04032012-A (Fr)

Imprimé en Chine

Limited 1 Year Warranty Information

iHome, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 1 Year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a $30.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is $60.00.

Before returning this product for service, please check our support section at www.ihomeaudio.com/support or call our customer service team to resolve any problems you may be experiencing.

If service is still required:

1. Pack unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of $30.00 ($60.00 without proof of purchase).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department
SDI Technologies Inc.
1330 Goodyear Dr.
El Paso, TX 79936-6420

Disclaimer of Warranty
NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, computers, routers, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product.

Questions? Visit www.ihomeaudio.com
Toll Free Customer Service: 1-800-288-2792
©SDI Technologies 2012 All rights Reserved.

Printed in China

iW3 04032012-A